Getting started

Dear customer, thanks for purchasing the Mi 10T Pro/Mi 10T phone. Let's start a wonderful journey to use this phone.

Before we get started, let's have a glance at the exquisite design of this phone.

Set up your device

Before using your phone, you need to set up your phone first. Among a large number of phone features, some of them require your special attention and need to be set up carefully.

- Turn phone on and off
- · SIM cards & mobile networks
- Display
- Lock screen

Turn phone on and off

You can turn your phone on or off by pressing and holding the Power button on the right side of your phone.

1. Turning on

Press and hold the Power button to turn your phone on.

2. Turning off

Press and hold the Power button until the menu appears. Tap Power off. If your device doesn't respond, press and hold the Power button for 15 seconds to force reboot.

3. Rebooting

Press and hold the Power button until the menu appears.

SIM cards & mobile networks

Before enjoying surfing the Internet with your phone, you need to insert a SIM card or SIM cards into your phone.

1. Inserting SIM, USIM, and UIM cards

Use the provided SIM tray extraction tool to take the SIM tray out of the bottom of your phone.

Place your SIM card inside the tray and insert it into your device. If your phone has two SIM cards inserted, you can set one as the default mobile data SIM and the other as the default calling SIM, or set call forwarding between the two SIM cards.

2. Removing SIM, USIM, and UIM cards

Use the provided SIM tray extraction tool to take the SIM tray out of the bottom of your phone.

Remove your SIM card from the tray and insert the tray back into your device.

Charge your phone



Charge your phone using a charger. Do not use unauthorized devices to charge your phone. Otherwise, the battery may be severely damaged or even lead to explosions.

Use the setup wizard

The first time you turn your phone on, the Setup Wizard guides you through the process of setting up your phone.

Follow the prompts to choose a default language, select a country or region, connect to a Wi-Fi network, log in using a Google account or Mi account, and more.

Switch from an iPhone/Android phone

You can move your data to a new Android phone from another kind of phone, or start fresh with your new Android phone. Important: Some of these steps work only on Android 11R and up.

Lock or unlock your device

Use your device's screen lock features to secure your device. By default, the device locks automatically when the screen times out.

Set your PIN

You can secure your device and protect your data by setting a PIN for screen lock.

Navigation buttons



	Menu: Tap to open options relating to the screen you're on
۲	Home: Tap to return to the Home screen. Tap and hold to launch the Google Assistant app
•	Back: Tap to open the previous screen that you were working in

Make a phone call

You can make phone calls from the S Phone app and other apps or widgets that show your contacts.

Wherever you see a phone number, you can usually tap it to dial.

Important: To use the phone app, you must accept the prompt to set it as your default.

Send your message

You can send and receive text messages with friends and contacts on Messages.

Explore your phone

Camera & Gallery

With the Camera app, you can capture high-quality pictures and videos and store them in Callery, where you can view and edit them.

Camera

How to quickly open Camera

- 1. From the Home screen
 - Tap the . Camera app on the Home screen to open your camera.
- 2. From the Lock screen

Swipe left on the Lock screen to open O Camera.



Swipe left on the Lock Screen to open Camera

Gallery

Open the Callery app to view all the visual media stored on your device. You can view, edit, and manage pictures and videos.

View pictures

Pictures stored on your device are viewable in the Callery app.

Edit pictures

Enhance your pictures using the Callery's editing tools.

- 1. From Callery, tap Photos.
- 2. Tap a photo to view it, and then tap 🗹 Edit

Play video

View the videos stored on your device. You can save videos as favorites, and view video details.

- From Sallery, tap Photos.
- Tap a video to view it. Swipe left or right to view other pictures or videos.
- 3. Tap Play video to play the video.

Edit video

Edit videos stored on your device.

- From Sallery, tap Photos.
- 2. Tap a video to view it.
- 3. Tap 🔏 Edit

Settings

Change your volume settings

- 1. On your phone, press the volume button.
- 2. At the right, tap --- Settings.
- 3. Slide the volume levels to where you want them.

Clock

Adding alarms

Open the O Clock app and tap the plus icon + on the start page to add an alarm. Choose whether you're adding a repeating alarm, select your ringtone, and tap \checkmark Done.

Recorder

1. Recording audio

Open the **O** Recorder app and just tap **O** Record to start recording audio. You can pause and resume the process, as well as mark specific segments while you're recording.

2. Viewing your recordings

Tap = Recordings to see all the recordings you've made.

3. Settings (may vary on different devices)

Tap the ③ Settings icon at the upper-right corner to view available options. Here you can set recording quality, allow using receiver to play audio, and more.

Calculator

1. Basic calculator

Basic calculator is the first thing you see when you open the app.

2. Scientific calculator

Open
Calculator and tap the
Couple to switch to the scientific calculator, which can perform operations with trigonometric functions, angular radians, and roots.

3. Converter

This feature allows you to convert currencies as well as multiple units of measurement.

4. Mortgage calculator

With adjustable repayment methods and interest rates, mortgage calculator makes planning your finances much simpler.

Compass

1. How to calibrate your device

Compass will suggest that you calibrate your device after it detects significate interference.

Just follow the instructions on your screen in such cases.

2. Compass

Place your device on a horizontal surface to see the compass face.

Hold your phone vertically to see the picture provided by your camera.

3. Level

Swipe left from the start page to use your phone as a level.

Cleaner

Cleaner helps you delete files from your smartphone. Thanks to this useful app, you can delete tons of files you no longer need with the tap of a button. That includes the cache files, obsolete files, installation packages, residual files from uninstalled apps, and lots of other elements that take up unnecessary space on your smartphone.