


TV Safety Notice and Installation Guide

• Installation

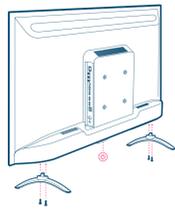

01 Installation (Table Top)

Insert Left/Right Stand Base to TV as shown in the picture and fasten them using screws.
Note: 1) For installation in wall, kindly contact customer care for help. 2) Wall/Bracket should be a part of standard accessory.

02 Turn on the TV

Connect TV power cord to ac power outlet carefully. Plug the power button located at bottom of TV (or press power button on remote), to turn it on. Follow screen instructions of quick start guide to setup TV.



Great things are going to happen!

• Accessories




Note: 1) Accessory items may vary depending upon model. 2) Specifications may change without prior notice. Recommended visiting website: www.vivi.com for latest updates.

• TV interface

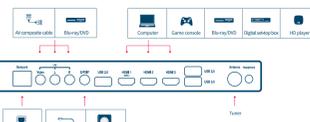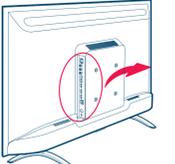

• Using the remote control

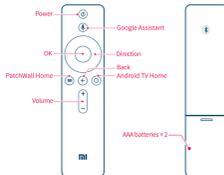

Power: Short press to power off TV. Long press to select Power off or Restart TV.
Google Assistant: Short press and release to talk to Google Assistant.
OK: Press to confirm current selection during navigation. You can also play the current video during playback, except Live Channels (Set Top Box or RF).
Android TV Home: Short press to quickly return to the Android TV Home screen.
PatchWall Home: Short press to quickly return to the PatchWall Home screen.
Direction: Navigate up/down or left/right through content. During playback use left/right buttons to rewind/fast-forward.
Back: Go back to the previous level.

• Specs

Basic Specs	Screen size: 55inch Screen resolution: FHD (1920x1080) Refresh rate: 60Hz	Wireless Connectivity	Wi-Fi: 2.4GHz/5GHz/11n/160MHz Bluetooth: BT4.2
Hardware Specs	CPU: Quad-core CAS3 Internal memory: 1GB DDR Flash memory: 8GB eMMC Graphics processor: Mali-450MP	Audio and Video Encoding	Audio formats: FLAC, AAC, DTS, DTS+D Video formats: MPEG-1/2/4, H.264, H.265, VC1
Ports	Input interface: HDMI x 3, AV x 1, Antenna x 1 Output interface: Digital audio output (S/PDIF) x 1 Audio Output: HDMI (ARC), L, HeadPhone x 1 Data interface: USB2.0 x 2, Ethernet port x 1	Model	Android TV Model: L43MS-AN

• Important precautions

Installation
• Do not install the TV in a place where it will be subjected to direct sunlight.
• Place the TV on a smooth, flat surface to avoid any damage to the screen.
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.

Warning
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.

Verifications
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.

Wall mounting
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.

AC power cord
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.

Children
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.

Optimal views
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.

Advertising
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.

Usage restrictions
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.

How to dispose this product
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.

De:
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.

Do:
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.

Using and cleaning the accessories of the TV
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.

Precautions
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.

Children
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.


Optimal views
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.

Panduan Keamanan TV dan Panduan Instalasi

WISAP PLAZA DISTRIBUTOR
Pusat Perawatan dan
Pusat Penjualan Resmi di Seluruh Indonesia

WISAP PLAZA DISTRIBUTOR
Pusat Perawatan dan
Pusat Penjualan Resmi di Seluruh Indonesia

• Instalasi

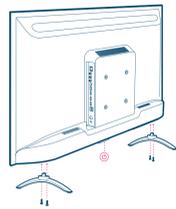

01 Instalasi (Di Atas Meja)

Pasangkan Dudukan TV Kanan/Kiri seperti yang ada di gambar dan kencangkan dengan menggunakan sekrup.
Catatan: 1) Pastikan lubang bagian belakang untuk pemasangan di dinding. 2) Braket/Braket harus bagian dari aksesori standar.

02 Menyalakan TV

Sambungkan kabel listrik TV ke soket listrik AC dengan hati-hati. Tekan tombol Power yang berada di bawah TV atau tekan tombol Power di Remote control untuk menyalakannya.
Jika pemirsa pada layar memuat memuat pengaturan pada TV.



Hal-hal hebat akan terjadi!

• Aksesori




Catatan: 1) Aksesori mungkin berbeda tergantung pada model. 2) Spesifikasi dapat berubah tanpa pemberitahuan sebelumnya. Disarankan untuk mengunjungi situs web www.vivi.com untuk pembaruan terbaru.

• Antarmuka TV

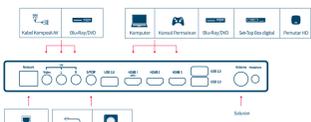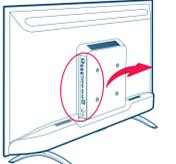

• Menggunakan Remote Kontrol

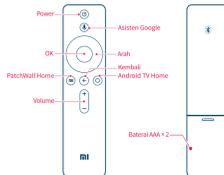

Power: Tekan sekali untuk mematikan TV. Tekan lama untuk memilih Mematikan atau Menyalakan TV Kembali.
Asisten Google: Tekan sebentar dan lepaskan untuk berbicara pada Google Assistant.
OK: Tekan untuk mengonfirmasi pilihan saat ini selama navigasi. Anda bisa Press/Play selama pemutaran video, kecuali saluran langsung (Set Top Box atau RF).
Android TV Home: Tekan sebentar untuk kembali ke layar Android TV Home.
PatchWall Home: Tekan sebentar untuk kembali ke layar PatchWall Home.
Arah: Arahkan ke atas/bawah atau kiri/kanan melalui kontrol, selama pemutaran gambar (tombol OK/kanan untuk memundurkan)/mempercepat.
Kembali: Kembali ke halaman sebelumnya.

• Spesifikasi

Spesifikasi Dasar	Ukuran Layar: 55inch Resolusi Layar: FHD (1920x1080) Refresh rate: 60Hz	Konektivitas Nirkabel	Wi-Fi: 2.4GHz/5GHz/11n/160MHz Bluetooth: BT4.2
Spes Peringkat Keras	CPU: Quad-core CAS3 Memori Internal: 1GB DDR Memori Flash: 8GB eMMC Prosesor Grafis: Mali-450MP	Format Audio dan Video	Format Audio: FLAC, AAC, DTS, DTS+D Format Video: MPEG-1/2/4, H.264, H.265, VC1
Port	Input Penghubung: HDMI x 3, AV x 1, Antenna x 1 Output Penghubung: audio digital output (S/PDIF) x 1 Audio Output: HDMI (ARC), L, HeadPhone x 1 Data Penghubung: USB2.0 x 2, Port Ethernet x 1	Model	TV Android Model: L43MS-AN Voltase: 100-240V~50/60Hz Klasifikasi Daya: 70W

• Tindakan pencegahan

Instalasi
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.

Jika terjadi masalah di bawah ini...
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.

Pemutaran
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.

Perawatan
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.

Verifikasi
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.

Pemasangan Dinding
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.

Kabel Listrik AC
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.

Pengisian
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.

Menggunakan dan membersihkan layar/penutup dari TV
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.

Aksesori
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.

Hal opsional
• Do not touch the screen directly with your hands. Use a soft, lint-free cloth to clean the screen.
• Do not use harsh cleaning agents or solvents on the screen.
• Do not touch the TV's internal components or the power cord.
• Do not touch the TV's internal components or the power cord.