TV Safety Notice and Installation Guide

• Installation

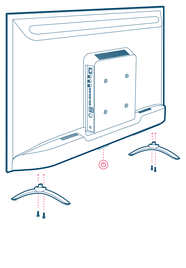

01 Installation (Table Top)

Insert Left/Right Stand Base to TV as shown in the picture and fasten them using screws.

Note: 1) For Installation on wall , Kindly contact customer care for help.
2) Wall Mount Bracket is not a part of standard accessory.

02 Turn on the TV

Connect TV's power cord to ac power outlet carefully.
Push the power button located at bottom of TV (or press power button on remote) to turn it on.
Follow screen instructions of quick start guide to setup TV.

Great things are going to happen!

• Accessories

Remote control	User manual	Screws x 4

Note:
1) Accessory items may vary depending upon model.
2) Specifications may change without prior notice. Recommended visiting website (www.mi.com) for latest updates.

• TV interface

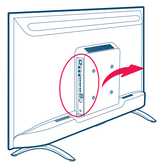

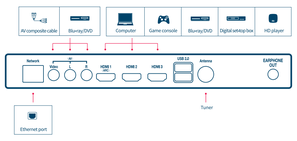

• Using the remote control

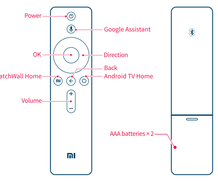

Power: Short press to power off TV; Long press to select Power off or Restart TV.

Google Assistant: Short press and release to talk to Google Assistant.

OK: Press to confirm current selection during navigation. You can pause/play the current video during playback, except Live Channels(Set-Top Box or RF).

Android TV Home: Short press to quickly return to the Android TV Home screen.

PatchWall Home: Short press to quickly return to the PatchWall Home screen.

Direction: Navigate up/down or left/right through content. During playback use left/right buttons to rewind/fast-forward.

Back: Go back to the previous level.

• Specs

Basic Specs	Screen size: 80cm Screen resolution: HD (1366x768) Refresh rate: 60Hz
Hardware Specs	CPU: Quad-core CA53 Internal memory: 1GB DDR Flash memory: 8GB eMMC Graphics processor: Mali-450MP
Ports	Input interface: HDMI x 3; AV x 1; Antenna x 1 Output interface: Audio output HDMI (ARC) x 1; EARPHONE OUT x 1 Data interface: USB2.0 x 2; Ethernet port x 1

Wireless Connectivity	Wi-Fi: 2.4GHz (802.11 b/g/n) Bluetooth: BT4.2
Audio and Video Encoding	Audio formats: FLAC; AAC; OGG; DTS-HD Video formats: MPEG 1/2/4; H.263; H.264; H.265; VC1
Model	Android TV Model: L32M5-AN Voltage: 100-240V~ 50 / 60Hz Rating power: 50W

• Important precautions

Installation

- The TV should be installed near an AC power outlet that can be easily plugged and unplugged.
- Place the TV on a smooth, flat surface to avoid the TV falling and causing injury, or damaging the TV.
- If you intend to install a TV wall mount, we recommend that you use an authorized TV wall mount installation service provider to install the wall mount.
- The diameter and lenghth of the screws will vary depending on the wall mount model. Failure to use the correct screws may cause the TV to fall or lead to internal damage.

Moving

- Disconnect all cables before moving the TV.
- Large TV need 2 or more people to move safely. Avoid applying pressure to the LCD panel when moving the TV. Avoid shaking the TV or exposing it to excessive vibrations.
- When moving the TV to a new location or to carry out repairs, package the TV using the original box and packaging materials.

Ventilation

- Do not cover the ventilation holes or insert any objects into the case.
- Keep a space for ventilation around the TV.

Wall mounting

In order to ensure proper ventilation and prevent the buildup of dust or dirt:

- Do not mount the TV flat, upside-down, or backwards, or side mount the TV.
- Do not place the TV on a shelf, carpet, bed, or closet.
- Do not cover the TV with fabric (such as curtains) or other materials (such as newspapers).

AC power cord

Use the AC power cord and socket according to the instructions below to avoid fire, electric shock, damage, or personal injury:

- Insert the plug completely into the AC outlet.
- Use the TV with a 100-240V AC power source.
- To disconnect power from the TV, power cord should be unplugged for safety reasons. Be careful not to trip over cables.
- Before carrying out work or moving the TV, disconnect the AC power cord from the AC power outlet.
- Keep the AC power cord away from heat.
- Clean the AC power cord regularly. Regularly **if** the plug is covered with dust and has water vapor, its insulation quality may deteriorate, producing a fire risk.
- Avoid excessive pinching, bending, modifying, or twisting of the AC power cord, otherwise the wires may become exposed or broken.
- Do not place any heavy objects on the AC power cord.
- Do not pull the AC power cord when disconnecting the power.
- Do not connect too many devices on the same AC power outlet.
- Do not use unsuitable AC power outlets.

Children

- Do not let children climb the TV.
- Place small objects out of the reach of children in order to avoid swallowing.

Optional items

- Keep optional accessories or any devices that emit electromagnetic radiation away from the TV in order to avoid image distortion or noise.

In case of the following problems ...

- The AC power cord is damaged.
- TV AC power cord is damaged.
- The TV is damaged due to a drop or impact
- Any liquid or solid object falls into the case through air outlet,

turn off the TV and immediately unplug the AC power cord. Ask the Xiaomi service center to dispatch qualified service personnel to investigate.

Usage restrictions

Do not install/use the TV in the following places, environments, or conditions, otherwise the TV may malfunction and cause a fire, electric shock, damage, or personal injury.

- **Places:**

Outdoors (in direct sunlight, by the sea, in a ship or other vessel, inside a car, in a medical institution, at an unstable location, next to water, or in a place exposed to rain, moisture, or mildew. **if** the TV is placed in the dressing room of a public bath or spa, it may be damaged by the water vapor.

- **Environment:**

Hot, damp, or dusty places; places where insects may enter; places that may be exposed to mechanical shock; next to flammable objects (such as candles). The TV should not be exposed to dripping or splashing water, and do not place any items containing liquid such as flower vases on the TV or above the TV (such as on shelves above the TV). Do not expose the TV to direct heat (near a stove or humidifier) to avoid fire, electric shock, or deformation. Do not boil water, heat, cook noodles, or use mosquito coils near the TV.

- **Operation:**

Do not use the TV when your hands are wet, when the case is open, or with accessories that are not authorized by the manufacturer. **In** the case of a lightning storm, disconnect the TV from the AC power cord and AC outlet. Do not install the TV in an open-air location. Failure to follow these instructions may lead to personal injury or damage, or cause objects to strike the TV.

- **Damage to HI TV:**

Do not throw any objects toward the TV, otherwise the screen may be broken due to the impact and cause serious injury. **In** case of damage to the surface of the TV, do not touch the TV before it has been disconnected from the power supply, otherwise electric shock may occur.

- **Operating conditions:**

Operating temperature: 0°C–40°C. Humidity: 20%–80% Storage temperature: -15°C–40°C Relative humidity: <60%

Precautions

- Watch TV in appropriate lighting conditions. Watching TV in insufficient light or for long periods can damage your eyesight.
- The screen and case will get hot when the TV is working. This is normal.
- Not support the decoding of ITS-CO bitstream coming in from **HDMI 01**.

Using and cleaning the screen/case of the Mi TV

Before cleaning the LED TV, ensure that the AC power cord is disconnected from the AC power outlet. **In** order to avoid deterioration of the casing materials or corroding the screen coating, please observe the following precautions:

- Wipe with a soft cloth to remove any dust on the surface of the screen/case. **If** there is still dirt, wipe with cloth dampened with water moistened with a mild detergent.
- Do not spray water or detergent directly onto the TV. **It** may drip to the base of the screen or external parts, causing malfunction.
- Do not use abrasive cloths, concentrated cleaners, scouring powder, or volatile liquids, such as alcohol, volatile oils, thinners, or insecticides. The use of the above materials or prolonged contact with rubber or vinyl products may cause damage to the screen surface and casing materials. **It** is recommended that you regularly clean the vents to ensure proper ventilation.
- When adjusting the angle of the TV, slowly move the TV to prevent it moving or slipping from the base.

Advertising

This TV displays advertising when it is switched on and off. The advertising that is displayed when the TV is switched on and off cannot be removed or altered, and we have no control over the content of third party advertising.

E-Waste

Xiaomi products are in conformity with the requirements of the reduction of hazardous substances of the E-waste Rules 2016. The content of hazardous substance with exemptions in the E-waste Rules listed in SCHEDULE **I** of the E-waste Rules.

1. Lead (Pb) – not over 0.1% by weight;
2. Cadmium (Cd) – not over 0.01% by weight;
3. Mercury (Hg) – not over 0.1% by weight.
4. Hexavalent chromium (Cr6+) – not over 0.1% by weight;
5. Polybrominated biphenyls (PBBs) – not over 0.1% by weight;
6. Polybrominated diphenyl ethers(PBDEs) – not over 0.1% by weight.

For the purpose of recycling to facilitate effective utilization of resources, please return this product to a nearby authorized Collection Centre, registered Dismantler or Recycler, or Xiaomi Service Centre when dismantling of this product.

What the Wheelie Bin symbol means: The symbol says don't dispose your e-waste into the municipal waste collection bins. That's because these wastes are hazardous in nature and need to be recycled in a special way.

How to dispose this product

Carry it to nearest service centre of Xiaomi 24X7 all the Toll Free Number: 1800 103 6286
OR Write to us on service.in@xiaomi.com. Instructions of handling the product during and after its use and End-of-Life with respect to handling the product.

Do's:

a. Always look for information on the catalogue with your product for end-of-life equipment handling.
b. Ensure that only Authorized Recyclers repair and handle your electronic products.
c. Always call Authorized E-waste Recyclers to Dispose products that have reached end-of life.
d. Always drop your used electronic products, batteries or any accessories when they reach the end of life at the right collection point specified by Authorized E-waste Recyclers.
e. Wherever possible or as instructed, separate the packaging material according to responsible waste disposal options and sorting for recycling.

Don'ts:

a. Do not dismantle your electronic Products on your own.
b. Do not throw electronics in bins having"Do not Dispose"sign.
c. Do not give e-waste to informal and unorganized sectors like Local Scrap Dealer/ Rag Pickers.

Google Assistant Wake with "Hey Google, Assistant is also a trademark, and is also in Design. The marks you see in this manual are only a part of Google, All are ready to help.

Chromecast built-in Cast your favorite entertainment appears to every TV device, Home, speaker, guests and Chromecast built-in and the Cast device Mark is a trademark of Google LLC. Chromecast is a TV. Find Chromecast built-in apps at g.co/castapps.

dts dts.com For a DTS patents, see http://patents.dts.com. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS-HD is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

HDMI

For more assistance, please visit www.mi.com/in - Mi Customer Service: www.mi.com/in/service

Panduan Keamanan TV dan Panduan Instalasi

MKGe P.32.APZ.07830.0918

Produk ini Diproduksi oleh :
PT. Advance Gemilang Industries
Jalan Raya Kaligawe Km 20 Demak, Indonesia

Untuk :
PT Eclipse Sevaserbada Tbk
Jalan Cilincing Tanjung No. 29-D
Kebon Bawang
Jakarta - Indonesia

• Instalasi

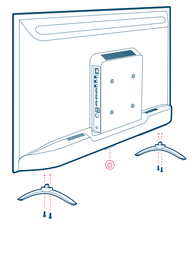

01 Instalasi (Di Atas Meja)

Pasangkan Dudukan TV Kanan/Kiri seperti yang ada di gambar dan kencangkan dengan menggunakan sekrup.

Catatan : 1) Silahkan hubungi layanan pelanggan untuk pemasangan di dinding.
2) Braket Dinding bukan bagian dari aksesori standar.

02 Menyalakan TV

Sambungkan kabel listik TV ke soket listrik AC dengan hati-hati.
Tekan tombol Power yang berada di bawah TV (atau tekan tombol Power di Remote kontrol) untuk menyalakannya.
Ikuti petunjuk pada layar menu untuk memulai pengaturan pada TV.

Hal-hal hebat akan terjadi!

• Aksesori

Remote kontrol	Panduan pengguna	Sekrup x 4

Catatan:
1) aksessori mungkin berbeda tergantung pada model.
2) Spesifikasi dapat berubah tanpa pemberitahuan sebelumnya. Disarankan untuk mengunjungi situs web (www.mi.com) untuk pembaruan terbaru.

• Antarmuka TV

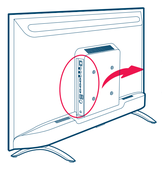

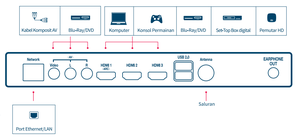

• Menggunakan Remote Kontrol

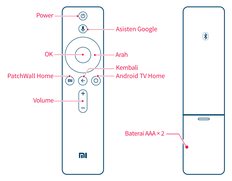

Power: Tekan sekali untuk mematikan TV ; Tekan lama untuk memilih Mematikan atau Menyalakan TV kembali

Asisten Google: Tekan sebentar dan lepaskan untuk berbicara pada *Google Assistant*.

OK: Tekan untuk mengonfirmasi pilihan saat ini selama navigasi, Anda bisa *Pause*/Ploy selama pemutaran video, kecuali siaran langsung (*Set-Top Box* atau RF).

Android TV Home: Tekan sebentar untuk kembali ke layar *Android TV Home*.

PatchWall Home: Tekan sebentar untuk kembali ke layar *Potchwall Home*.

Arah: Arahkan ke atas/bawah atau kiri/kanan melalui konten, selama pemutaran gunakan tombol kiri/kanan untuk memundurkan/mempercepat.

Kembali: Kembali ke halaman sebelumnya.

• Spesifikasi

Spesifikasi dasar	Ukuran Layar: 80cm Resolusi Layar: HD (1366x768) Refresh rate: 60Hz
Spek Perangkat Keras	CPU: CA53 quad-core Memori Internal: 1GB DDR Memori Flash: 8GB eMMC Prosesor Grafis: Mali-450MP
Port	Input Penghubung: HDMI x 3; AV x 1; Antenna x 1 Output Penghubung: Audio Output HDMI (ARC) x 1; Headphone x 1 Data Penghubung: USB2.0 x 2; Port Ethernet x 1

Konektivitas nirkabel	Wi-Fi: 2.4GHz (802.11 b/g/n) Bluetooth: BT4.2
Format Audio dan Video	Format Audio: FLAC; AAC; OGG; DTS-*HD* Format Video: MPEG 1/2/4; H.263; H.264; H.265; VC1
Model	TV Android Model: L32M5-AN Voltase: 100-240V~ 50/60Hz Klasifikasi Daya: 50W

• Tindakan pencegahan

Instalasi

- Peneptkan TV harus dipasang di dekat sumber listrik/soket yang mudah dipasang dan dilepas.
- Letakkan perangkat TV pada permukaan yang halus dan rata untuk mengindoran perangkat terjatuh dan menyebabkan cacat, atau kerusakan pada TV.
- Jika Anda bermaksud untuk memasang dinding TV, disarankan Anda menggunakan braket TV yang resmi. Untuk informasi lebih lanjut, hubungi layanan pelanggan Xiaomi.
- Diameter dan panjang dari sekrup tergantung dari jenis braket. Kesalahan dalam penggunaan sekrup yang tepat dapat mengakibatkan TV terjatuh atau masalah internal.

Pemindahan

- Lepas semua kabel sebelum memindahkan perangkat TV
- Perindahkan perangkat TV yang besar memerlukan 2 orang atau lebih agar aman. Hindari penekanan pada layar LCD saat pemindahan perangkat TV. Hindari penggoncangan pada TV atau getaran yang berlebihan.
- Saat memindahkan TV ke tempat baru atau melakukan perbaikan, pengemasan TV menggunakan kotak orisinil dan material kemasan.

Ventilasi

- Jangan menutup saluran ventilasi atau memasukkan benda apapun ke dalamnya.
- Jaga jarak yang cukup untuk ventilasi pada sekitar TV.

Pemasangan Dinding

Untuk memastikan ventilasi yang sesuai dan mencegah penumpukan debu atau kotoran :

- Jangan pasang TV secara datar, terbalik kebelakang, belakang, atau ke samping.
- Jangan letakkan TV pada lemari, laci/set, kasur, atau lemari.
- Jangan tutup layar TV dengan kain (misal gordyn) atau benda lain (seperti koran).

Kabel listrik AC

Gunakan kabel listrik AC dan soket sesuai dengan instruksi dibawah ini untuk menghindari kebakaran, sengatan listrik, kerusakan atau cidera :

- Masukkan steker dengan benar ke sumber listrik AC.
- Gunakan TV dengan sumber listrik AC 100-240 Volt.
- Saat menghubungkan kabel, kabel listrik AC harus dilepaskan terlebih dahulu untuk alasan keamanan. Hati-hati jangan tersandung kabel.
- Sebelum membawa atau memindahkan TV, lepas kabel listrik AC dari soket AC.
- Jaga kabel listrik AC dari panas.
- Lepas kabel listrik AC dari tempatnya secara berkala, jika colokan terlapisi debu dan embun air, insulasi yang dihasilkan dapat memburuk, dan bisnisku terbakar.
- Hindari penekukan, pemukulan, pemutusan kabel listrik pada kabel listrik AC, karena kabel dapat terbakar atau rusak.
- Jangan letakkan benda berat diatas kabel listrik AC.
- Jangan tarik kabel listrik AC saat memutkan perangkat.
- Jangan menghubungkan terlalu banyak perangkat pada soket listrik AC.
- Jangan menggunakan soket listrik AC yang tidak layak.

Anak-anak

- Jangan biarkan Anak-anak memanjat perangkat TV
- Jauhkan benda kecil dari jangkauan anak-anak untuk menghindari bahaya tertelan.

Hal-opsional

- Jauhkan aksesoris opsional atau perangkat lain yang memancarkan radiasi elektromagnetik dari TV untuk menghindari distorsi atau gangguan suara.

Jika terjadi masalah di bawah ini ...

- Kabel listrik AC rusak
- Soket listrik AC tidak layak
- Perangkat TV rusak akibat jatuh atau benturan
- Benda cair atau benda apapun jatuh pada permukaan,

Matikan perangkat TV dan segera lepaskan Kabel listrik AC. Hubungi service center Xiaomi untuk perbaikan pengiriman teknisi yang berkualifikasi untuk melakukan pemeriksaan.

Pembatasan penggunaan

Jangan pernah atau gunakan TV pada tempat, lingkungan, kondisi berikut karena dapat menyebabkan TV malfungsi dan menyebabkan api, sengatan listrik, kerusakan, atau cidera.

- **Tempat:**

Tempat terbuka (terpapar langsung sinar matahari), di laut, kapal, atau operasinya, di dalam kendaraan, di institusi medis, di lokasi yang tidak stabil, di dekat air, di tempat yang terpapar dengan oleh hujan, lembab, atau embun. Jika TV ditempatkan di ruang ganti bagi dalam tempat mandi umum atau spa, perangkat dapat rusak karena kandungan uap air di udara.

- **Lingkungan:**

Panas, basah, tempat berdebu, tempat serangga dapat masuk; tempat yang terkejaya sengatan mekanik; di sebelah objek terbakar (seperti lilin). Perangkat TV tidak boleh terekspos pada semua area percikan air, dan jangan letakkan benda yang memuat air seperti vas bunga di atas TV. Jangan letakkan TV di tempat yang basah atau berdebu, atau di dalam ruangan dengan kelembaban yang berlebihan untuk menghindari kebakaran, sengatan listrik, atau deformasi. Jangan rebus air, memasakan, memasak mie, atau menggunakan obat nyamuk bakar di dekat perangkat TV.

- **Operasi:**

Jangan gunakan TV saat tangan dalam kondisi basah, atau saat penutup terbuka, atau dengan aksesoris yang tidak disetujui oleh produsen. Dalam kasalaan badai petir, lepas TV dari kabel listrik AC dan sumber AC , jangan pasang TV pada tempat terbuka. Kesalahan dalam penggunaan yang tidak sesuai dengan petunjuk yang diberikan, akan menyebabkan kerusakan, kebakaran, atau sengatan listrik.

- **Kerusakan pada TV:**

Jangan lempar objek apapun ke arah TV, karena layar dapat rusak karena benturan dan menyebabkan kerusakan serius. Jika ada kerusakan pada layar TV, jangan sentuh TV sebelum kabel listrik AC dicabut, karena sengatan listrik mungkin terjadi.

- **Kondisi pengoperasian:**

Suhu pengoperasian: 0°C–40°C. Kelembapan: 20%–80% Suhu penyimpanan: -15°C–40°C Kelembapan relatif: <60%

Pencegahan

- Tonton TV dalam keadaan cahaya yang cesuai. Menonton TV pada keadaan cahaya yang kurang dalam jangka waktu lama dapat merusak penglihatan anda.
- Layar dan perangka TV dapat menjadi panas saat penggunaan, hal ini adalah normal.
- Untuk sekarang kabel HDMI **01** tidak mendukung DTS-CD, DTS-Express, DTS-HD.

Menggunakan dan membersihkan layar/penutup dari Mi TV

Sebelum membersihkan LED TV, pastikan kabel listrik AC telah lepaskan dari saket AC, untuk menyegah kemrosotan dari material pembuja atau korosi lapisan layar, lolong amati peringatan berikut :

- Usap permukaan layar/penutup dengan kain lembut untuk membersihkan debu . Jika masih ada debu yang menempel, usap dengan kain lembut yang dibasi sedikit deterjen.
- Jangan semprot air atau detergen secara langsung ke TV karena dapat merembes ke bagian bawah TV dan menyebabkan kerusakan.
- Jangan gunakan kain abrasif, pembersih berbahan alkalis/asam, bubuk gosok, atau cairan yang mudah menguap seperti alkohol, minyak yang mudah menguap, tiner, atau cairan insektisida. Penggunaan materi diatas atau kontak lama dengan karet atau produk vinyl dapat menyebabkan kerusakan pada permukaan layar dan material penutup. Disarankan Anda membersihkan saluran ventilasi dengan teratur untuk menjamin ventilasi yang sesuai.
- Saat menyesuaikan sudut dari TV, pindahkan TV dengan perlahan untuk menghindari TV terjatuh atau tergelincir dari dudukan TV.

Pengiklanan

TV ini menampilkan iklan ketika dinyalakan dan dimatikan . Iklan yang ditampilkan ketika TV dinyalakan dan dimatikan tidak dapat dihapus atau diubah, dan kami tidak memiliki kendali atas konten iklan dari pihak ketiga.

Limbah Elektronik

Produk ini sesuai dengan persyaratan pengurangan zat berbahaya dari Peraturan Produk Elektronik 2016. Isi dari zat berbahaya dengan pengecualian penggunaannya tercantum pada **SHEDULE I** peraturan limbah elektronik.

1. Lead (Pb) – tidak lebih besar dari 0.1%
2. Cadmium (Cd) – tidak lebih besar dari 0.01%
3. Mercury (Hg) – tidak lebih besar dari 0.1%
4. Hexavalent chromium (Cr6+) – tidak lebih besar dari 0.1%
5. Polybrominated biphenyls (PBBs) – tidak lebih besar dari 0.1%
6. Polybrominated diphenyl ethers (PBDEs) – tidak lebih besar dari 0.1%

Tujuan daur ulang untuk memfasilitasi pemanfaatan sumber daya secara efektif, mohon kembalikan produk ini ke pusat pengumpulan resmi terdekat, tukang bongkar bersertifikat atau pemulur ulang, atau pusat layanan Xiomi saat membuang produk ini.

Arti dari tong sampah adalah: simbol ini mengatakan jangan membuang sampah elektronik Anda ke tempat pengpul sampah. Peualnya, sampah elektronik ini berbahaya bagi alam dan perlu didaur ulang dengan cara khusus.

Cara membuang produk ini

Bawa produk ini ke pusat servis Xiaomi terdekat atau hubungi nomor bebas pulsa : 1800 103 6286 atau email kami di service.in@xiaomi.com. Instruksi penanganan produk ini saat penggunaan dan setelahnya dan hal yang boleh dan tidak boleh dilakukan untuk penanganan produk.

Lakukan

a. Selalu cari informasi produk dalam katalog tentang penanganan untuk akhir masa penggunaan.
b. Pastikan hanya tempat reparasi yang ter-wotorisasi yang menangani produk elektronik anda.
c. Selalu hubungi pusat daur ulang yang berwenang untuk membuang produk yang masa gunanya berakhir.
d. Selalu berikan barang elektronik bekas anda, baterai, atau aksesoris lain saat masa gunanya telah berakhir di tempat pengumpulan yang ditentukan oleh pusat daur ulang yang berwenang.
e. Jika memungkinkan atau di instruksikan, pisahkan material pembungkus berdasarkan tempat pembuangan material yang bersangkutan dan pisahkan untuk daur ulang.

Jangan Lakukan

a. Jangan membuka sendiri produk elektronik anda.
b. Jangan buang barang elektronik di tempat bertabel "Jangan buang sampah".
c. Jangan berikan barang elektronik yang sudah tidak terpakai pada pengepul lokal/pemungut sampah.

Google Assistant Wake with "Hey Google, Assistant is also a trademark, and is also in Design. The marks you see in this manual are only a part of Google, All are ready to help.

Chromecast built-in Cast your favorite entertainment appears to every TV device, Home, speaker, guests and Chromecast built-in and the Cast device Mark is a trademark of Google LLC. Chromecast is a TV. Find Chromecast built-in apps at g.co/castapps.

dts dts.com For a DTS patents, see http://patents.dts.com. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS-HD is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

HDMI

Untuk informasi lainnya, kunjungi www.mi.com/in Layanan Pengguna Mi : www.mi.com/in/service